

12-bit EON CompuScope Family

12-Bit Ultra-high Speed Digitizers for the PCI Bus

The 12-bit EON CompuScope Family provides the fastest available 12-bit digitizers with up to 2 GS/s sampling



APPLICATIONS

Radar Design and Test
Disk Drive Testing
Manufacturing Test
Signal Intelligence
Lidar Systems
Communications
Non-Destructive Testing
Spectroscopy
High-Performance Imaging
Ultrasound Test

FEATURES

- 1 or 2 digitizing channels
- Up to 2 GS/s maximum sampling per channel
- 12 bits vertical resolution
- 128 MS to 2 GS on-board acquisition memory
- 500 MHz bandwidth
- Frequency Response Flat with ± 0.5 dB up to 350 MHz
- Full-featured front-end, with software control over input ranges, coupling and filters
- Synchronize up to 8 cards in a Master/Slave mode
- Low power consumption (15 Watts typical)
- 32 bits, 66 MHz PCI standard for 200 MB/s transfer to PC memory
- Ease of integration with External or Reference Clock In and Clock Out, External Trigger In and Trigger Out
- Programming-free operation with GageScope® oscilloscope software
Software Development Kits available for LabVIEW, MATLAB, C/C#

MAIN EON COMPUSCOPE SPECIFICATIONS

| Model | Number of Input Channels | Maximum Sampling Rate | Input Bandwidth (-3 dB Point) |
|----------------|--------------------------|-----------------------|-------------------------------|
| CS122G1 | 1 | 2 GS/s | 500 MHz |
| CS121G2 | 2 | 1 GS/s | 500 MHz |
| CS122G1 | 1 | 1 GS/s | 500 MHz |

Vertical Resolution: 12-bits
 Basic Acquisition Memory¹: 128 MegaSamples
 Available Acquisition Memory Options: 256 MS, 512 MS, 1 GS, 2 GS

CHANNEL SPECIFICATIONS


Channel Input Voltage Ranges: ± 100 mV, ± 200 mV, ± 500 mV, ± 1 V, ± 2 V, ± 5 V (software-selectable)
 Channel Impedance: $50\ \Omega \pm 2\%$
 Channel Coupling: AC or DC (software-selectable)
 Channel DC User Offset²: Spans Full Scale Input Range (FSIR) (software-selectable)
 Channel Low-Pass Filter: 5-Pole with -3dB point at 70 MHz
 (May be independently software-selected for each input channel)
 Channel-to-Channel Isolation: Better than -95 dB
 Channel Absolute Max Input³: ± 10 V

¹ Memory is divided among the all active channels (1 or 2)

² Adjustable in 1/2 % steps. On ± 500 mV and ± 5 V range offset is limited to ± 240 mV and ± 2.4 V, respectively.

³ On ± 500 mV, ± 200 mV and ± 100 mV input ranges, input signal is automatically switched away from input circuitry if it exceeds roughly ± 2 V.

EON CompuScope Simplified Block Diagram

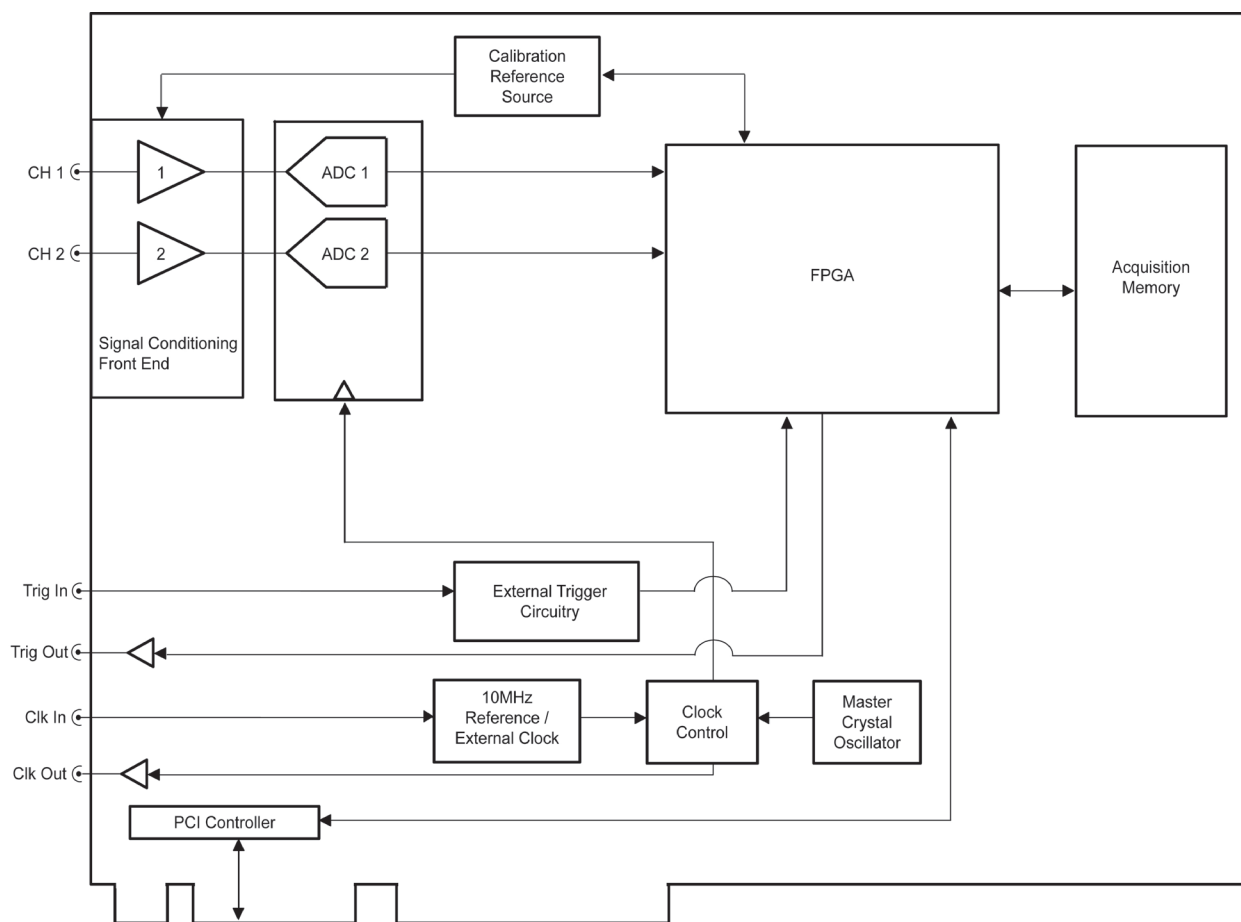


PHYSICAL/MECHANICAL

| | |
|-------------|---|
| Length: | 312.00 mm / 12.283" |
| Width: | < 14.5 mm/0.570" (neighboring PCI slots are accessible) |
| Height: | 106.68 mm / 4.200" |
| Weight: | < 0.33 Kg / 0.75 lbs |
| Connectors: | SMA |

PCI INTERFACE

| | |
|------------|--------------------------------|
| PCI Speed: | 32-bit PCI – 33 or 66 MHz |
| PCI Power: | Universal - 3.3 Volt or 5 Volt |

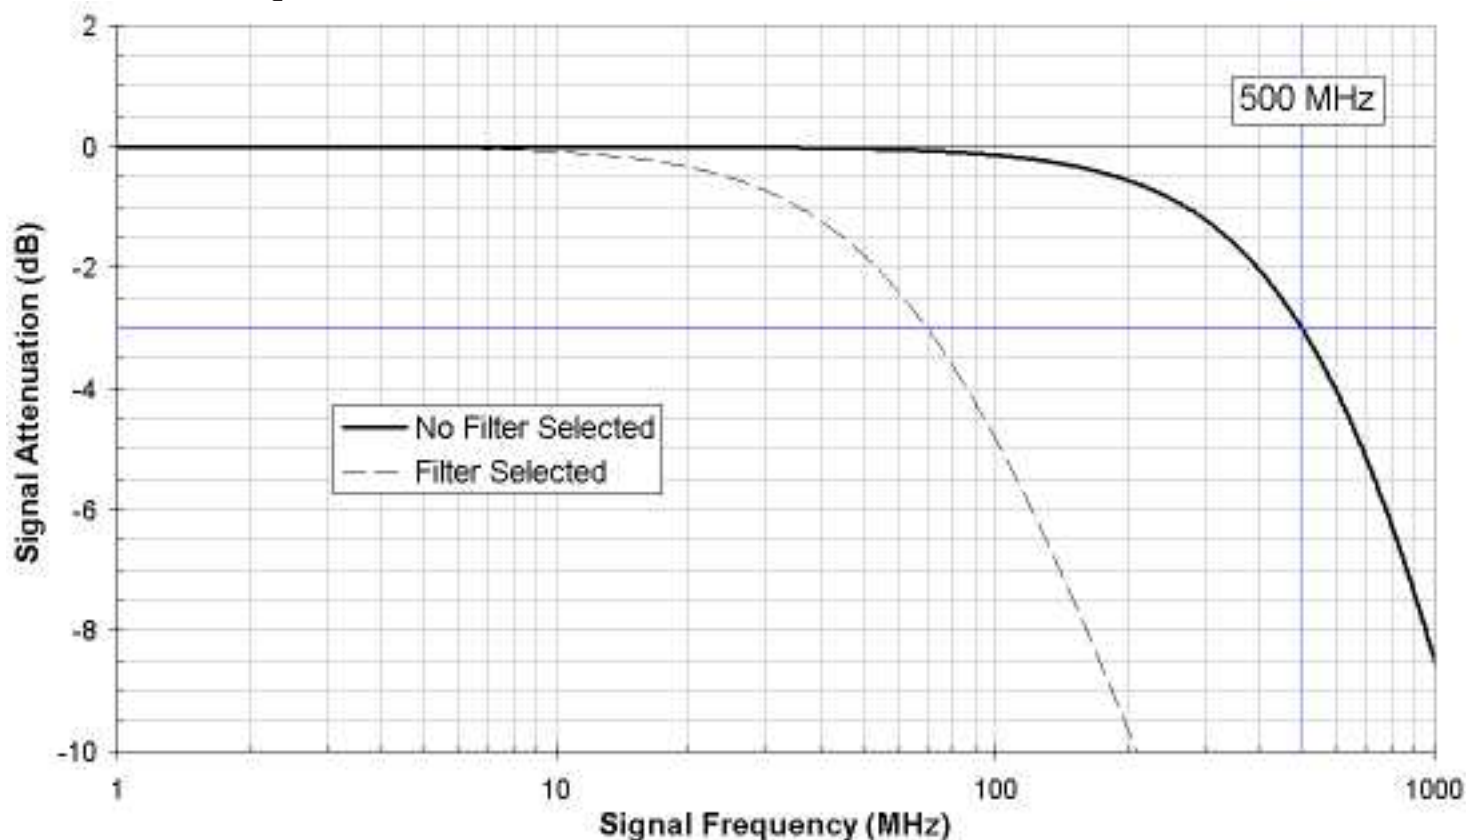CHANNEL FREQUENCY RESPONSE

Note: Typical Frequency Response curves above taken on the ± 1 V input range with 50 Ω termination and DC coupling. In AC coupling mode, the lower -3 dB cutoff is at 20 kHz.

| Input Range | 12-bit EON CompuScope | |
|--------------|-----------------------|----------------|
| | Bandwidth (MHz) | Flatness (MHz) |
| ± 2 V | 500 | 350 |
| ± 500 m | TBA | TBA |
| ± 100 mV | TBA | TBA |

Note: The *Bandwidth* is defined as frequency at which the signal attenuation falls below -3 dB of its value at a 1 MHz signal frequency. The *Flatness* is the frequency below which the signal attenuation is constant within ± 1 dB of its value at a 1 MHz signal frequency.

Rise Time¹: 1.0 nanoseconds (Typical)

¹ The Rise Time is calculated as $0.35/\text{Bandwidth}$

CHANNEL ABSOLUTE ACCURACY

DC Gain and Offset Error are presented as a function of the Full-Scale Input Range (FSIR). For example, on the ± 1 Volt Input Range, the FSIR is 2 Volts.

Absolute DC Gain Error (Volts): $< \pm 0.5\% \times (\text{FSIR})$
e.g. Gain Error $< 0.5\% \times 2\text{V} = 10\text{ mV}$ on $\pm 1\text{ V}$ Input Range (50Ω)

Absolute DC Offset Error (Volts): $< \pm (0.1\% \times (\text{FSIR}))$
e.g. $< 0.1\% \times 2\text{V} = 2\text{ mV}$ on $\pm 1\text{ V}$ Input Range (50Ω)

Notes:

The Maximum Absolute DC Error may be calculated by summing the Absolute DC Gain Error and the Absolute DC Offset Error in quadrature

$$\text{Maximum Absolute DC Error} = \sqrt{(\text{Absolute DC Gain Error})^2 + (\text{Absolute DC Offset Error})^2}$$

For example, on the ± 1 Input Range

$$\text{Maximum Absolute DC Error} = \sqrt{(0.5\% \times 2\text{V})^2 + (0.1\% \times 2\text{V})^2}$$


Maximum Absolute DC Error $< 10.2\text{ mV}$

Maximum Absolute DC Error $< 0.51\%$ of FSIR

These values relate only to the Absolute accuracy of the EON CompuScope boards and say nothing about the relative accuracy. Relative accuracy performance is superior and is provided by the Dynamic Performance Parameters.

Each time that a new input configuration (e.g. Input range, termination, coupling) is selected, the CompuScope undergoes an on-board auto-calibration sequence, which corrects for component value changes due to aging or thermal drift.

Before shipment, all EON CompuScopes are tested at the factory using the Gage Performance Verification System. This system introduces DC voltages from a NIST-traceable calibrator source to the card in all input configurations and confirms that no measured errors are worse than the errors listed above.

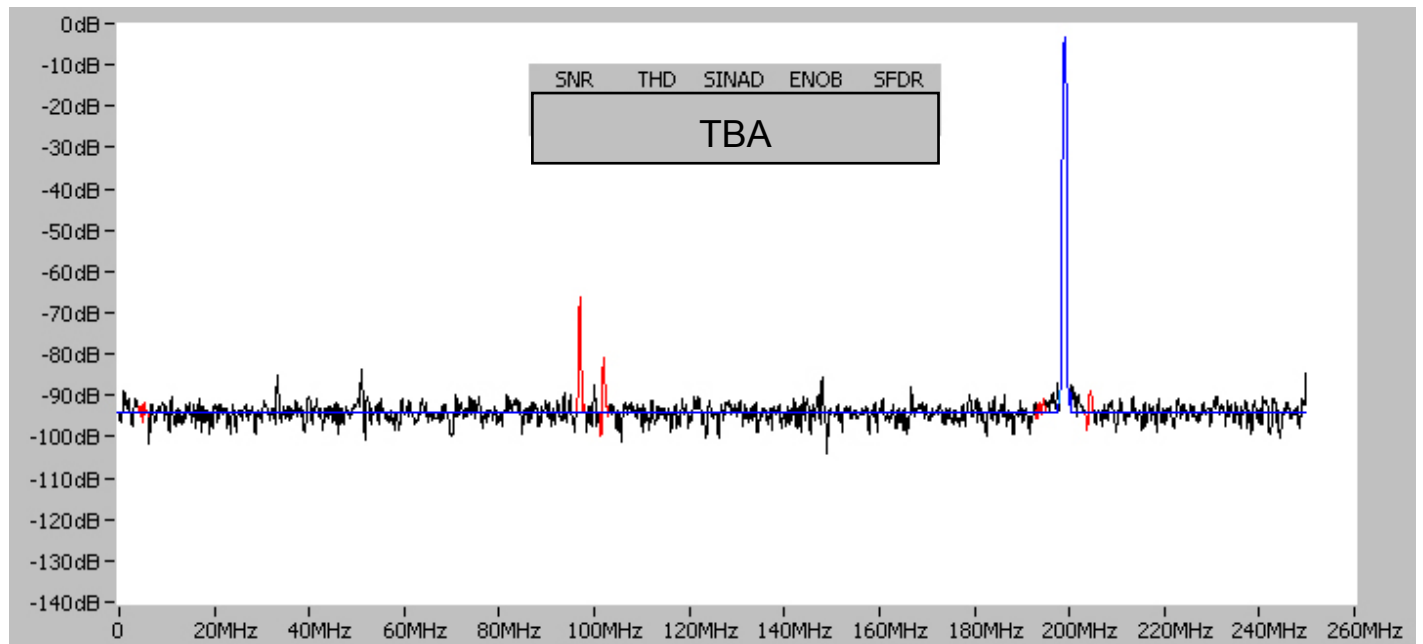DYNAMIC PERFORMANCE

Frequency spectrum above taken on an EON CompuScope on its ± 500 mV input range with DC coupling.

Dynamic Parameters are measured by acquiring a high-purity 199 MHz sine wave signal, deriving an associated Fourier Spectrum and identifying the Fundamental Power (F), the Noise Power (N) and the Harmonic Power (H). These Powers are measured as the areas under the frequency bins respectively indicated in blue, red and black in the frequency spectrum above.

DYNAMIC PARAMETERS DEFINITIONS

Signal-to-Noise Ratio (SNR) $\equiv 10 \times \log (F/N)$

Total Harmonic Distortion (THD) $\equiv 10 \times \log (H/F)$

Signal-to-Noise-and-Distortion Ratio (SINAD) $\equiv 10 \times \log (F/(H+N))$

Effective Number Of Bits (ENOB) $\equiv (SINAD - 1.76 \text{ dB})/6.02 \text{ dB}$

Spurious Free Dynamic Range (SFDR) \equiv Amplitude of highest spurious spectral peak

RMS Noise \equiv Standard Deviation of acquired signal with CompuScope input loaded with extreme 50Ω terminator.

| Dynamic Parameters with 10 MHz Signal Frequency ¹ | | | | | |
|---|-----|-----|-------|------|------|
| Input Range | SNR | THD | SINAD | ENOB | SFDR |
| ±500 mV | TBA | TBA | TBA | TBA | TBA |
| ±100 mV | TBA | TBA | TBA | TBA | TBA |
| Dynamic Parameters with 70 MHz Signal Frequency ¹ | | | | | |
| Input Range | SNR | THD | SINAD | ENOB | SFDR |
| ±500 mV | TBA | TBA | TBA | TBA | TBA |
| ±100 mV | TBA | TBA | TBA | TBA | TBA |
| Dynamic Parameters with 199 MHz Signal Frequency ¹ | | | | | |
| Input Range | SNR | THD | SINAD | ENOB | SFDR |
| ±500 mV | TBA | TBA | TBA | TBA | TBA |
| ±100 mV | TBA | TBA | TBA | TBA | TBA |

| RMS Noise on Select Input Ranges | | | | |
|----------------------------------|-----|-----|-----|-----|
| Input Range | TBA | TBA | TBA | TBA |
| CS122G1 | TBA | TBA | TBA | TBA |
| CS121G2 | TBA | TBA | TBA | TBA |
| CS121G1 | TBA | TBA | TBA | TBA |

¹ All data acquired with DC coupling and with no low-pass filters activated.

TIME-DOMAIN SAMPLING

Internal Sampling Rates¹: 2 GS/s, 1 GS/s, 500 MS/s, 125 MS/s, 50 MS/s, 25 MS/s, 10 MS/s, 5 MS/s, 2.5 MS/s, 1 MS/s, 500 kS/s, 250 kS/s, 100 kS/s, 50 kS/s, 25 kS/s, 10 kS/s, 5 kS/s, 2.5 kS/s, 1 kS/s

Internal Sampling Rate Accuracy/Stability²: 1 part-per-million
Channel-to-Channel Skew³: Less than 100 picoseconds

CLOCK IN

Clock In Signal Level: Minimum 300 mV peak-to-peak
Maximum 5 V peak-to-peak

Clock In Signal Input Termination: 50 Ω

Clock In Signal Input Coupling: AC

Clock In Signal Duty Cycle: 50% \pm 5%

Clock In Modes:

10 MHz Reference – High accuracy 10 MHz input signal disciplines the internal sampling oscillator so that, for example, a 200 MS/s sampling rate is at exactly 20X the 10 MHz reference frequency

Clock Out Signal Level: 0 - 2.5 V into 50 Ω
0 - 5 V into 1 M Ω

Clock Out Signal Output Termination: 50 Ω

1 Maximum sampling rate depends on model number

2 Master Sampling Oscillator is disciplined by an on-board temperature-compensated 10 MHz reference signal with 1 part-per-million accuracy and stability.

3 Channels use same input settings

TRIGGERING

| | |
|-------------------------------|---|
| Trigger Source: | Any Input Channel, External Trigger or Software |
| Trigger Level: | Software controllable analog Trigger level with span of the Full Scale Input Range (FSIR) of the Trigger Source. Adjustable in ½ % steps |
| Trigger Slope: | Positive or Negative (software-selectable) |
| Trigger Engines: | 2 per Input Channel, 1 for External Trigger - results logically ORed to create trigger event |
| Trigger Jitter ¹ : | 1 Sample |
| Trigger Hold-off: | Allows triggers to be ignored in order to ensure acquisition of any pre-set amount of pre-trigger data. |
| Trigger Delay: | Allows suppression of the acquisition of any amount of post-trigger data in order to conserve memory for the acquisition of only later waveform data. |

INTERNAL TRIGGERING

| | |
|---|---|
| Internal Trigger Sensitivity ² : | ±2% of Full Scale Input Range of Trigger Source |
| Internal Trigger Level Accuracy: | Better than ±2% of Full Scale |

EXTERNAL TRIGGERING

| | |
|--|---|
| External Trigger Input Voltage Ranges: | ±1 V, ±5 V (software-selectable) |
| External Trigger Coupling: | AC or DC (software-selectable) |
| External Trigger Input Impedance: | 1 kΩ or 50 Ω (software-selectable) |
| External Trigger Input Bandwidth: | >500 MHz |
| External Trigger Absolute Max Input: | ±6 V |
| External Trigger Sensitivity: | ±5% of Full Scale External Trigger Range |
| External Trigger Level Accuracy: | ±10% of Full Scale External Trigger Range |

TRIGGER OUT³

| | |
|--|--|
| Trigger Out Signal Level: | 0 - 2.5 V into 50 Ω 0 - 5 V into 1 MΩ |
| Trigger Out Signal Output Termination: | 50 Ω compatible |

1 This jitter applies for an asynchronous trigger and sampling clock. Sub-nanosecond jitter may be achieved using synchronous trigger and sampling clock

2 Signal amplitude must be at least 4% of Full Scale Input Range of Trigger Source to cause a trigger event. Smaller signals are rejected as noise.

3 The Trigger Out signal is useful for triggering user signals so that they are synchronous with the CompuScope's internal sampling clock

GENERAL COMPUSCOPE ACQUISITION

ACQUISITION MODES:

1. Single Record Mode – In Single Record Mode, each waveform is downloaded to PC RAM, where it is accessible to the user, prior to the next waveform acquisition.
2. Multiple Record Mode – In Multiple Record Mode, acquired waveforms are stacked in on-board Compuscope memory for later download. Between successively triggers, the acquisition circuitry is rapidly re-armed in hardware with no software communication required.

Segment Memory is the amount of memory available to hold waveform data, which may include both pre- and post-trigger data

Post-Trigger Data: 32 Sample minimum up to full Segment Memory. Post-trigger Depth may be increased in steps of 32 Samples.

Pre-Trigger Data: Up to full Segment Memory.

MAXIMUM SEGMENT MEMORY

Single Record Mode^{1, 2}:

Max Segment Memory \approx Total on-board memory / Number of Active Channels


Multiple Record Mode²:

Segment Memory \approx Total on-board memory / Number of Active Channels / Number of Segments

1 Number of Active Channels may be 1 or 2.

2 The above equation is not exact due to storage of a small amount of inter-record data, such as Time-Stamping Information.

SINGLE RECORD MODE ACQUISITION

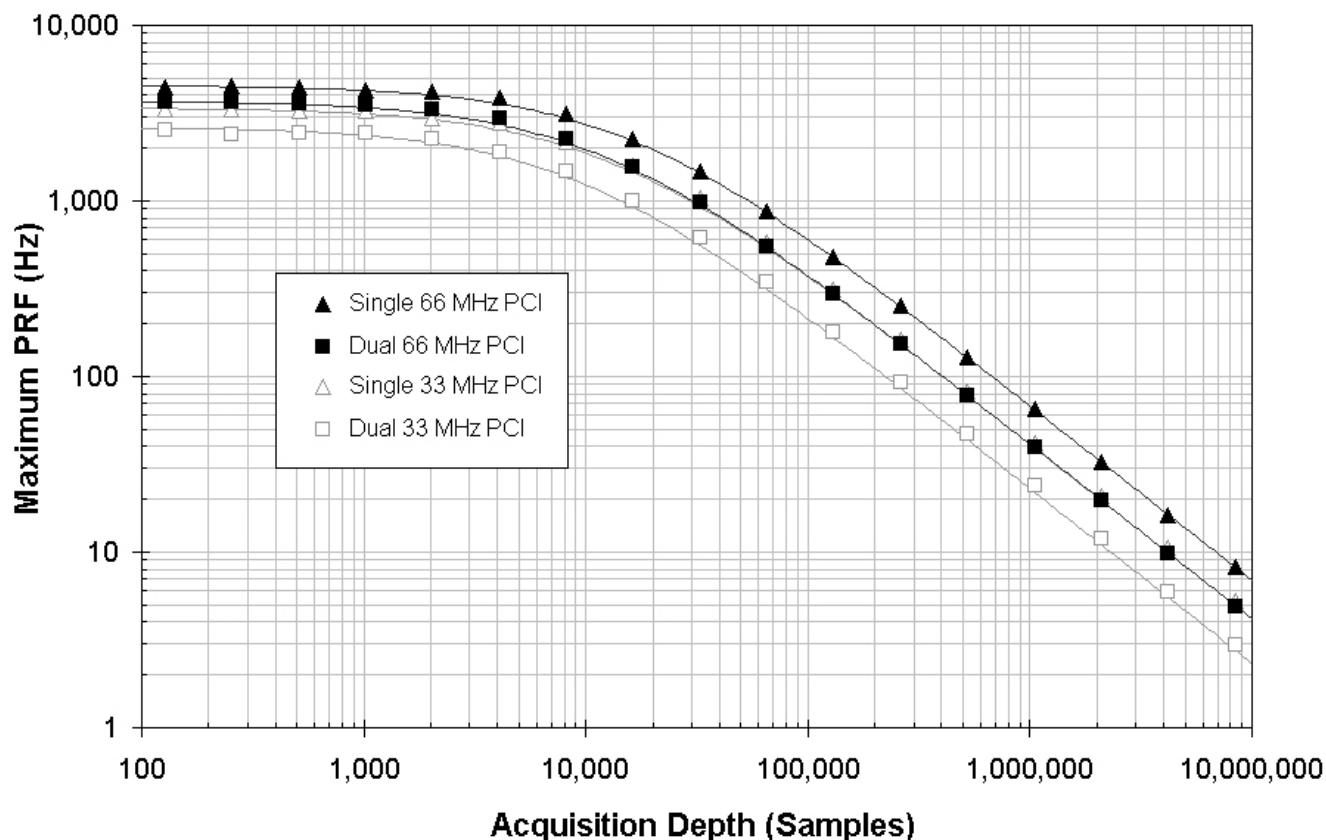

Repetitive Waveform Acquisition Performance

The plot above shows the EON CompuScope's maximum Pulse Repeat Frequency (PRF), which is the maximum trigger rate without trigger loss. Curves are shown with a sampling rate of 500 MS/s for acquisition of 1 and 2 channels (Single and Dual) and for PCI clock speeds of 33 MHz and 66 MHz. (In practice, 66 MHz PCI usually implies PCI-X). Straight line portions of the curves at high Depths provide measurement of PCI bus-mastering transfer speeds of over 100 Megabytes/second and 200 Megabytes/second respectively for 33 MHz and 66 MHz PCI.

No data processing or storage to hard drive were performed for the PRF measurements and performance may vary slightly with system configuration.

MULTIPLE RECORD MODE ACQUISITION

Multiple Record Inter-Trigger Re-arm time: Less than 4 microseconds

Note: Because the no software communication is required during a Multiple Record acquisition, the Re-arm time is completely deterministic or invariant. For example, an acquisition of duration 6 microseconds could be triggered at a rate of up to $1/(6 \mu\text{s} + 4 \mu\text{s}) = 100 \text{ kHz}$ with a guarantee of no loss of triggers.

TRIGGER TIME-STAMPING

The Trigger Time –Stamping functionality tags the occurrence time of trigger events using a wide high–speed on-board counter that has high accuracy and is independent of any Host PC timing.

| | |
|--|--|
| Time–Stamping Counter Clock source: | Fixed 137.5 MHz on-board oscillator or one-fourth of Sampling Clock (Max 500 MHz)(software-selectable) |
| Time–Stamping Counter Resolution: | One clock cycle |
| Time–Stamping Counter Width: | 44-bits |
| Time–Stamping Counter Rollover time ¹ : | 39 hours or more |

MULTI-COMPUSCOPE SYSTEMS

Master/Slave CompuScope Mode

| | |
|---|-----------|
| Number of Master/Slave EON CompuScopes: | 2-8 cards |
| Board-to-Board Timing Skew: | TBA |

Note: In a Independent CompuScope system, identical CompuScopes are configured to behave from a hardware and software perspective as a single multi-channel digitizer system. All CompuScopes within a Master/Slave system will sample, trigger and re-arm simultaneously. CompuScopes self-configure as a Master/Slave system upon detection of the internal Master/Slave inter-CompuScope bridge-board connector. This system may be broken up into independent CompuScopes simply by not installing the bridge-board.

Independent CompuScope Mode

Number of Master/Slave EON CompuScopes: Number limited only by number of PCI slots in backplane and available DC power.

Note: Users may install independent CompuScopes, which may be different models, within a single host PC. Independent CompuScopes may trigger and sample asynchronously. Independent asynchronous Compuscope operation is fully supported by GageScope and all Compuscope Software Development Kits (SDKs).

POWER CONSUMPTION

| PCI DC SUPPLY | CS121GX | CS122GX |
|---------------|---------|---------|
| +5 V | 5.8 W | 7.2 W |
| +3.3 V | 5.3 W | 6.2 W |
| +12 V | 1.3 W | 2.6 W |
| -12 V | 0.3 W | 0.4 W |
| -5 V | 0 | 0 |
| Total | < 13 W | < 17 W |

Note: The consumption values above are for EON CompuScopes with the base acquisition memory of 128 MegaSamples. For a 2 GigaSample Compuscope, the extra power consumption is 3 Watts. For intermediate memory options, the extra consumption increases in proportion to the amount of memory.

¹ At the top Time-Stamping Counter clocking rate of 500 MHz/4, the counter rollover time is $2^{44}/125 \text{ MHz} > 39$ hours

EON COMPUSCOPE – AUXILIARY INPUT/OUTPUT OPTION

With this option, the EON CompuScope is equipped with two additional SMA connectors on its back-plate – a Digital Input connector and a Digital Output connector. The functionality of these connections may be software-selected as one of the functionalities listed below. Call factory for custom Digital Input/Output requirements.

DIGITAL INPUT

Signal Level: 0-5 V TTL

Digital Input Functionalities

Trigger Enable: After acquisition begins, trigger events are ignored until a rising (or falling) edge on the Digital Input signal is detected. The Trigger Enable input can also be configured in Gate Mode, where triggers are accepted or ignore based on the signal level. The functionality is useful for Video signal frame applications or in hard drive testing.

Time-Stamp Reset: Upon detection of a rising edge on the digital Input sign, the CompuScope resets the value of the Time Stamping counter to 0. This feature is useful to synchronize the CompuScope Time-Stamping counter to external timing reference events from, for example, an IRIG device.

DIGITAL OUTPUT

Signal Level: 0-5 V TTL

Digital Output Functionalities

Busy Out: This Digital Output signal goes HIGH while the CompuScope is acquiring waveform data and remains LOW otherwise. It is useful to synchronize other devices with the beginning or end of CompuScope acquisition. One important example is the triggering of a second CompuScope by the falling edge Busy Out so that acquisition is continued on this second CompuScope.

HOST PC SYSTEM REQUIREMENTS

PCI-based computer, minimum Pentium II 500 MHz, with at least one free full-length PCI slot, 128 MB RAM, 100 MB hard disk.

Operating System:

| | |
|-----------------|---------------------------|
| Windows 7: | All Versions (32/64-bit) |
| Windows Vista: | All Versions (32/64-bit) |
| Windows XP: | SP1 or higher (32/64-bit) |
| Windows Server: | 2003, 2008 |
| Linux Version: | Debian 5 |

SOFTWARE SUPPORT

Application Software:

GageScope is a Windows-based software for programming-free CompuScope operation

GageScope LITE Edition: Included with purchase, provides basic functionality

GageScope Standard Edition: Provides limited functionality of advanced analysis tools, except for Extended Math

GageScope Professional Edition: Provides full functionality of all advanced analysis tools

Software Development Kits:

CompuScope SDK for C/C# for Windows

Includes: CompuScope C SDK for Windows¹

CompuScope .NET SDK for Windows²

CompuScope SDK for MATLAB for Windows

CompuScope SDK for LabVIEW for Windows

FIRMWARE SUPPORT

eXpert Signal Averaging Firmware Option

Call factory for custom eXpert Signal Processing Firmware

OPERATING TEMPERATURE

Internal PC Temperature Range: 0 °C to +50 °C

CERTIFICATION

CE: Pending

FCC: Pending

RoHs: Compliant

¹ C SDK is compatible with LabWindows/CVI 7.0 +

² .NET SDK is CLR compliant and includes support for Visual Basic .NET and Delphi

WARRANTY

One year parts and labor

Certificate of NIST Traceable Calibration is included.

*All specifications subject to change without notice.

ORDERING INFORMATION

Hardware & Upgrades

| | |
|-------------------------------------|-------------|
| CS122G1 (1 channel, 12-bit, 2 GS/s) | EON-122-G10 |
| CS121G2 (2 channel, 12-bit, 1 GS/s) | EON-121-G20 |
| CS121G1 (1 channel, 12-bit, 1 GS/s) | EON-121-G10 |

| | |
|----------------------------------|-------------|
| Memory Upgrade: 128 MS to 256 MS | 120-181-001 |
| Memory Upgrade: 128 MS to 512 MS | 120-181-003 |
| Memory Upgrade: 128 MS to 1 GS | 120-181-005 |
| Memory Upgrade: 128 MS to 2 GS | 120-181-007 |

| | |
|------------------------|-------------|
| Set 1 Cable SMA to BNC | ACC-001-031 |
| Set 4 Cable SMA to BNC | ACC-001-033 |

| | |
|------------------------------------|-------------|
| EON: Auxiliary Input/Output Option | 120-181-101 |
| Master Multi-Card Upgrade | 120-181-002 |
| Slave Multi-Card Upgrade | 120-181-003 |

| | |
|---|-------------|
| <u>eXpert™ Firmware Options</u> | |
| eXpert Signal Averaging Firmware Option | 250-181-001 |

GageScope® Software

| | |
|---|-------------|
| GageScope: Lite Edition | Included |
| GageScope: Standard Edition (with Purchase of CompuScope Hardware) | 300-100-351 |
| GageScope: Professional Edition (with Purchase of CompuScope Hardware) | 300-100-354 |

Software Development Kits (SDKs)

| | |
|----------------------------|-------------|
| GaGe SDK Pack on CD | 200-113-000 |
| CompuScope SDK for C/C# | 200-200-101 |
| CompuScope SDK for MATLAB | 200-200-102 |
| CompuScope SDK for LabVIEW | 200-200-103 |

900 N. State St.
Lockport, IL 60441-2200

Toll-Free (US and Canada):

phone 1-800-567-4243
fax 1-800-780-8411

Direct:

phone +1-514-633-7447
fax +1-514-633-0770

Email:

prodinfo@gage-applied.com

To find your local sales representative
or distributor or to learn more about
GaGe products visit:

www.gage-applied.com